



Dakota Alert, Inc. www.dakotaalert.com

PO Box 130 • 32556 East Main St. • Elk Point, SD 57025

PH: 605.356.2772 • FAX: 605.356.3662

AD-KFW (Key Fob)

Remove the battery insulator by pulling the tab on the keyfob. Plug the DC adaptor into the dialer and plug into wall outlet. Wait 20 seconds. You now have 30 seconds to teach the dialer. Press the RECORD button on the dialer and the display will show “learning 0.” Press any key on the RF Keyfob. The display will then show “learning 1” followed by a BEEP to confirm that it has learned the first keyfob. You then have another 30 seconds to teach it another keyfob (“learning 2”) and so on up to 5 keyfobs.

Opening the RF Keyfob (only necessary when it is time to change the battery):

1. Using a small Phillips screwdriver, remove the screw from the back of the keyfob.
2. Take a small standard screwdriver and place in groove separating the two keyfob halves.
3. Slowly twist and the keyfob housing should separate.